

۲.....	مقدمه
۳.....	دستورالعمل های ایمنی
۴.....	اجزاء و قطعات
۵.....	راهنمای استفاده از خردکن دانمور
۷.....	جدول دستورالعمل استفاده
۹.....	تجزیه و تحلیل خطا
۱۰.....	گارانتی و خدمات پس از فروش



• دانمور، به عنوان یک برند قابل اعتماد، تلاش می‌کند تا نیازهای شما را با ارائه محصولات با کیفیت و قابل اعتماد برطرف کند. هدف ما این است که با تلاش بالا، بهترین روش‌های رفع نوسانات بازار را برای شما فراهم کنیم.

• بسته‌بندی و ارسال سفارشات شما برای ما بسیار حائز اهمیت است و به همین دلیل، خرید شما را قدردانی می‌کنیم. در صورت داشتن هرگونه سوال یا نیاز به راهنمایی، تیم پشتیبانی ما همواره آماده است تا به شما کمک کند. با دانمور، دیگر نگران خرید لوازم خانگی خود نباشید.



MODEL: DR-1005

۲

FOOD CHOPPER

دستورالعمل‌های ایمنی

لطفاً قبل از استفاده از دستگاه، دستورالعمل‌های ایمنی، راهنمای نصب قطعات و راهنمای استفاده از دستگاه را مطالعه کنید.

۱. قبل از استفاده دستگاه برای اولین بار تمام بخش‌هایی که با غذا در تماس هستند را کاملاً شوئید.

۲. این دستگاه فقط برای استفاده خانگی و مکان‌های مشابه آن طراحی شده است.

۳. این وسیله برای استفاده توسط افراد از جمله (کودکان با ناتوانی فیزیکی، حسی و عقلی یا افراد بی تجربه و ناآگاه) طراحی نشده است مگر اینکه با حضور سرپرست مسئول در قبال ایمنی آن‌ها و نظارت یا دستورالعمل استفاده از وسیله باشد.

۴. باید اطمینان حاصل شود کودکان با این وسیله بازی نمی‌کنند.

۵. حتماً قبل از تعویض قطعات یا قسمت‌های متحرک، دستگاه را خاموش و دو شاخه را از پریز درآورید.

۶. بررسی کنید که ولتاژ دستگاه با ولتاژ برق مصرفی مطابقت داشته باشد.

۷. هرگز دستگاه به صورت خالی و بدون مواد و همچنین از این دستگاه بیش از حد مجاز که در جدول راهنما ذکر شده است استفاده نشود.

۸. در صورت بروز هرگونه مشکل و خرابی در هر یک از اجزای دستگاه اعم از کابل تغذیه و دو

شاخه هرگز از دستگاه استفاده نکرده و فوراً با یکی از نزدیک‌ترین مراکز خدمات پس از فروش تماس گرفته یا دستگاه را به مرکز ارسال نمایید.


۹. اکیداً توصیه می‌شود به هیچ عنوان، هیچکدام از قطعات دستگاه را برای ضدفونی با بخار آب جوش یا ضدفونی به صورت خشک در دمای بالا قرار ندهید.

۱۰. تیغه‌ها بسیار تیز هستند لطفاً هنگام تمیز کردن آن را زیر شیر آب بگیرید و از تماس مستقیم با دست خودداری کنید.

۱۱. دستگاه، سیم و دو شاخه‌ی آن را داخل آب یا مایعات دیگر قرار ندهید.

۱۲. سیم برق دستگاه می‌بایست دور از منبع

۲. دارای کاسه‌ی درجه‌ای موادغذایی، سالم و بهداشتی، آسان برای تمیز کردن
۳. قطعات قابل جدا شدن، آسان برای تمیز کردن
۴. دارای ساختار متغیر، عملکرد پایدار، سر و صدای کم، مخلوط کردن قوی
۵. مواد را پخش کنید تا غذا به راحتی خارج شود

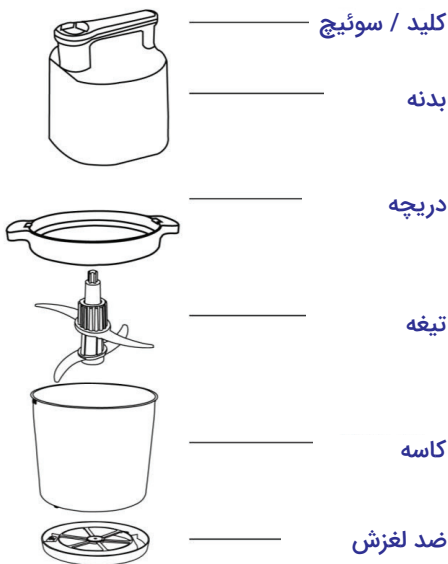

۱۳. تا زمانی که تمامی قطعات را نصب ننموده‌اید دو شاخه را به برق وصل نکنید
۱۴. از ریختن مواد بسیار داغ به داخل کاسه خودداری کنید که می‌تواند باعث خارج شدن بخارهای ناگهانی شود
۱۵. در اولین استفاده از محصول ممکن است از دستگاه بوی نامطبوع احساس شود که برای اولین بار طبیعی می‌باشد
۱۶. قبل از اضافه کردن مواد، مطمئن شوید که تیغه چرخ کردن در جای خود نصب شده است و می‌تواند آزادانه عمل کند
۱۷. قدرت موتور این محصول زیاد است، لطفاً هنگام استفاده دسته را نگه دارید تا از تکان دادن بیش از حد محصول جلوگیری شود

اجزاء و قطعات

مشخصات محصول

۱. دارای دستگاه حفاظت از گرمای بیش از حد موتور، ایمن و قابل اعتماد

MODEL: DR-1005 **۴**

FOOD CHOPPER

درپوش قرار دهید به طوری که شیار موتور و در

پوش در راستا هم در جای خود قرار گیرد

۶. محصول با سرعت سریع یا آهسته کار می کند.

ابتدا با توجه به مواد غذایی پیچ خورده برای

انتخاب سرعت مناسب (فرآورده های گوشتی از

سرعت تند استفاده می کنند.)، سپس برای پخت

و پز، سبزیجات و میوه ها استفاده از سرعت کند

پیشنهاد می شود

۷. برق را روشن کنید و کلید را فشار دهید تا

عملیات ضربه ای شروع شود (۳ ثانیه ضربه بزنیید

تا به مدت ۲ ثانیه متوقف شود.) عملیات ضربه ای

را تکرار کنید حداقل ۳ بار قبل از کار مداوم، یک کار

مداوم نباید از زمان کار نامی تجاوز کند (جدول

پیوست را ببینید.) تا بر عمر مفید محصول

تأثیری نگذارد

۸. پس از اتمام کار، منبع تغذیه را قطع کنید.

وقتی چرخش تیغه متوقف شد، دستگاه اصلی

را بردارید و درپوش شفاف را باز کنید. به کمک

کاردک گوشت را بیرون بیاورید

راهنمای استفاده از خردکن دانمور

۱. قبل از استفاده از محصول برای اولین بار،

قطعاتی را که در تماس با مواد غذایی هستند، به

خوبی بشویید

۲. هنگامی که برق دستگاه به پریز وصل است،

سوئیچ را با دست خود فشار دهید دستگاه

شروع به کار می کند و زمانی که دست خود را

رها کنید دستگاه از کار می افتد

۳. قبل از استفاده، تاندون، استخوان و پوست

گوشت را جدا کنید

۴. تیغه را داخل کاسه بزارید، مواد را به صورت

قطعات ۱-۲ سانتی متری برش دهید و داخل کاسه

بریزید، سبزیجات و میوه ها را در کاسه بریزید و

مقدار مناسب آب اضافه کنید، مقدار کل مواد در

کاسه نباید از نصف ظرفیت کاسه بیشتر باشد در

غیر این صورت محصول مورد نظر به خوبی بدست

نمی آید و بر عمر مفید دستگاه هم اثر می گذارد

۵. درب کاسه را در جای مناسب قرار دهید تا در

موقعیت درست بسته شود سپس موتور را روی



۹. اگر مواد به کاسه چسبید، کلید را خاموش کرده و برق را قطع کنید. قبل از استفاده دوباره از یک کاردک برای جدا کردن مواد استفاده کنید.

۱۰. از این محصول برای خرد کردن دانه‌های سویا یا برنج یا سایر مواد غذایی سخت که نیازمند آسیاب کردن است نمی‌توان استفاده کرد.

۱۱. اگر محصول به دلیل توزیع ناهموار می‌لرزد، محصول را متوقف کنید، مواد را به طور مساوی در کاسه پخش کنید و سپس محصول را باز کنید.

۱۲. اگر مواد در عرض ۱۵ ثانیه به دست نیامد، لطفاً کلید پاور را خاموش کنید و محصول را پس از فاصله ۱۰-۲۰ ثانیه روشن کنید. این روش برای افزایش عمر محصول مفید است.



غذا	مقدار	تذکر	تعداد چرخش	زمان لازم برای هر عملیات
گوشت گاو یا گوسفندی	۶۵۰ گرم	استخوان ها و پوست را جدا کرده و به قطعات کوچک برش دهید	۳ بار	۱۰-۵ ثانیه
گوشت مرغ	۷۵۰ گرم	استخوان ها و پوست را جدا کرده و به قطعات کوچک برش دهید	۳ بار	۱۰-۵ ثانیه
پیاز	۱۲۰۰ گرم	هر چهار عدد	۴ بار	۵-۳ ثانیه
پیاز سبز چینی	۱۲۰۰ گرم		۴ بار	۵-۳ ثانیه
فلفل	۱۲۰۰ گرم	هر فلفل را به ۴ سانتی متر برش دهید	۴ بار	۵-۳ ثانیه
هویج	۱۵۰۰ گرم	هر هویج را تقریباً به اندازه ۲ سانتی متر برش دهید	۴ بار	۵-۳ ثانیه
گوجه فرنگی	۱۵۰۰ گرم	هر چهار عدد	۲ بار	۵-۳ ثانیه
سبزیجات	۶۰۰ گرم	سبزیجات را به اندازه ۳ سانتی متر برش دهید.	۴ بار	۵-۳ ثانیه
سیب زمینی - تارو	۱۵۰۰ گرم	پوست کنده و پخته شده	۴ بار	۵-۳ ثانیه
میوه	۱۵۰۰ گرم	حدود ۲ سانتی متر برش بزنید	۲ بار	۵-۳ ثانیه
تخم مرغ	۲۴ عدد		۱ بار	۵-۳ ثانیه
بادام زمینی-گردو	۱۲۰۰ گرم	پوسته جدا شود	۳ بار	۱۰-۵ ثانیه
آجیل	۱۲۰۰ گرم	پوسته جدا شود	۳ بار	۱۰-۵ ثانیه
پودر های سوخاری-خرده نان	۱۲ برش	از نان ترد استفاده کنید	۲ بار	۵-۳ ثانیه
سوسیس-ژامبون	۱۲۰۰ گرم	هر سوسیس یا ژامبون را به ۳ یا ۴ قسمت برش دهید	۱ بار	۱۰-۵ ثانیه

توجه

کلید را به مدت ۳ ثانیه برای توقف و ۲ ثانیه برای استفاده چرخه‌ای فشار دهید. طولانی‌ترین زمان برای فشار دادن سوئیچ نباید از ۵ ثانیه تجاوز کند

راهنمای نگهداری و تمیز کردن دستگاه

۱. قبل از تمیز کردن محصول، حتماً دوشاخه برق را جدا کرده و منبع تغذیه را قطع کنید.
۲. لطفاً پس از استفاده بلافاصله محصول را تمیز کنید.
۳. لطفاً هنگام تمیز کردن، بدنه و لوازم جانبی کاسه را با آب بشویید و خشک کنید. تیغه آن بسیار تیز است
۴. بیرون موتور را می‌توان با یک پارچه مرطوب پاک کرد. بدنه اصلی را داخل مایع قرار ندهید و آن را در آب یا مایع دیگر نشویید
۵. محصول باید در جای خشک نگهداری شود و از تابش مستقیم نور آفتاب جلوگیری شود.
۶. قبل از نگهداری از تمیز و خشک بودن محصول اطمینان حاصل کنید.



بدون شستشو



بدون غوطه‌وری در آب



بدون شستشو



بدون غوطه‌وری در آب

تجزیه و تحلیل خطا

عیب دستگاه	تحلیلی بر علل	عیب‌یابی
در اوایل استفاده از محصول، موتور بوی نامطوبعی از خود متصاعد می‌کند.	به دلیل تازه بودن دستگاه این بو عادی می‌باشد. اگر محصول پس از استفاده مکرر همچنان این بو را منتشر می‌کند، لطفاً آن را برای آزمایش به نزدیکترین مرکز تعمیر ارسال کنید	این بو برای موتور جدید کاملاً عادی می‌باشد
ایست دستگاه	۱. ولتاژ خیلی کم است. ۲. سنسور حفاظت از کنترل دمای موتور	۱. بررسی کنید که آیا ولتاژ خیلی کم است، یا خیر
لرزش غیر طبیعی یا صدای بلند	۱. تکیه گاه تیغه در جای خود نصب نشده است. ۲. قرار دادن محصول پایدار نیست. ۳. ولتاژ خیلی زیاد است. ۴. مواد بیش از اندازه.	۱. مواد را بیرون بیاورید و تیغه را در جای خود نصب کنید ۲. قرار دادن محصول پایدار. ۳. بررسی کنید که آیا ولتاژ خیلی زیاد است ۴. کلید را خاموش کنید، برق را قطع کنید و مواد اضافی را بردارید
تیغه	تیغه در غذا گره می‌خورد یا گیر می‌کند.	کلید را خاموش کنید، برق را قطع کنید، مواد را بردارید و به قطعات کوچکتری برش دهید

توجه داشته باشید:

موارد فوق روش رایج تجزیه و تحلیل عیب و عیب‌یابی است، برای سایر عیوب لطفاً با بخش خدمات مشتریان شرکت تماس بگیرید و یا مستقیماً به نقطه تعمیر تعیین شده شرکت برای تعمیر مراجعه کنید

گارانتی و خدمات پس از فروش

• شرکت دانمور، یک برند قابل اعتماد است که تلاش می‌کند تا با ارائه محصولات با کیفیت و قابل اعتماد، نیازهای شما را برطرف کند. هدف ما این است که با تلاش بالا، بهترین روش‌های رفع نوسانات بازار را برای شما فراهم کنیم

• ما به بسته‌بندی و ارسال سفارشات شما بسیار اهمیت می‌دهیم و خرید شما را قدردانی می‌کنیم. در صورت داشتن هرگونه سوال یا نیاز به راهنمایی، تیم پشتیبانی ما همواره آماده است تا به شما کمک کند

• با دانمور، دیگر نگران خرید لوازم خانگی خود نباشید. با محصولات با کیفیت و قابل اعتماد ما، به راحتی می‌توانید از لحظات خانه‌داری لذت ببرید


• به علاوه، دانمور یک گارانتی ۲۴ ماهه برای این دستگاه ارائه می‌دهد. در صورت بروز هرگونه مشکل، شما می‌توانید با شرکت تولید کننده تماس بگیرید و از خدمات پس از فروش آن

استفاده کنید. همچنین، در صورت نیاز به تعمیرات قطعات جایگزین و خدمات، می‌توانید با شماره تماس ۰۲۱۹۱۶۹۱۴۱۳ / ۰۹۱۸۷۹۵۹۰۸۵ / ۰۸۷۳۴۲۷۸۵۳۲ تماس بگیرید و از خدمات آن استفاده کنید

توان	۷۵۰ وات
فرکانس	۵۰ هرتز
ولتاژ	۲۲۰-۲۴۰ ولت



Made in I.R.IRAN

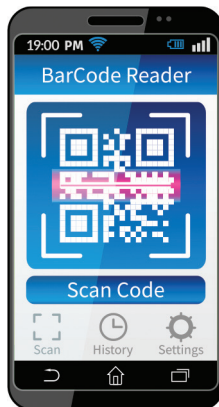


MODEL: DR-1005 10

FOOD CHOPPER

Garranty and after - sales service

- Danmor Company is a reliable brand that strives to meet your needs by providing quality and reliable products. Our goal is to provide you with the best ways to deal with market fluctuations with high effort.
- We take the packaging and shipping of your orders very seriously and appreciate your purchase. If you have any questions or need help, our support team is always ready to help you. With Danmor, you won't have to worry about buying appliances again. With our quality and reliable products, you can easily enjoy the moments of housekeeping.
- Additionally, Danmor offers a 24-month Garranty for this device. In case of any problem, you can contact the manufacturer Use its after-sales service.

Also, if you need repairs, replacement parts and services, you can call at **02191691413 / 0918 795 9085 / 087 342 78532** and use its services.

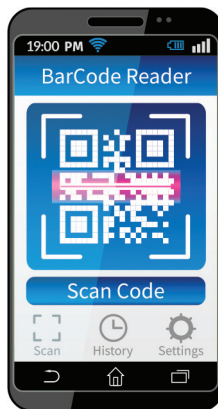

750W	Power
50HZ	Frequency
220-240V	Voltage



Made in I.R.IRAN

 MODEL: DR-1005

FOOD CHOPPER

fault analysis

The fault phenomenon	Cause analysis	troubleshooting
During the first few uses of the product, the motor gave off an unpleasant smell	The new motor is used normally at first	If the product still emits this odor after repeated use, please send it to the nearest repair point for testing
Stop in service	1.The voltage is too low 2. Motor temperature control protection	1.Check if the voltage is too low ۲. Stop using for ۲۰-۳۰ minutes
Abnormal vibration or loud noise	1.The skein knife rest is not installed in place 2.Product placement is not stable 3.The voltage is too high 4. Overeating	۱. Take out the ingredients and install the skein knife rest in place ۲. Stable product placemen ۳. Check if the voltage is too high ۴. Turn off the switch, disconnect the power and remove the excess ingredients.
Card knife	The blade gets tangled or stuck in the food	Turn off the switch, disconnect the power ,remove the ingredients and cut into small pieces .s


Note

The above is the common fault analysis and troubleshooting method, for other faults, please contact the company's customer service department, or directly to the company's designated repair point for repair, do not disassemble repair.

1. The meat mincer blade is sharp, please pay attention to safety and be careful to hurt your hand when using.
2. Only when the cutlery is put into the cup body and covered can it be connected with the machine head!!!
3. Under no circumstances should the cutter and the nose be connected separately.

Cleaning and Maintenance

1. Before cleaning the product, be sure to remove the electrical head and disconnect the power supply.
2. Please clean the product in time after using.
3. When cleaning, please rinse the cup body and accessories with water and wipe them dry. The blade is very sharp.
4. The outside of the motor can be wiped with a damp cloth. Do not put the main body into the liquid or wash it in water or other liquid.
5. Store the product in a dry place and avoid direct uv exposure.
6. Make sure the product is clean and dry before storage.

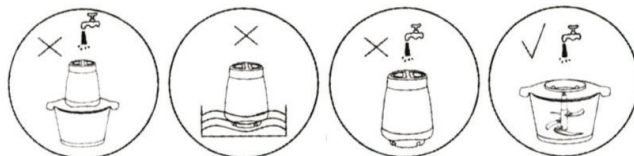

No water immersion No flushing No water immersion No flushing

7. Please operate strictly according to the rated working time. The continuous working time shall not exceed 15 seconds.
8. After finishing the processing, please remove the motor after the motor and blade stop rotating and ensure the power is disconnected.
9. If the product stops working during operation because the motor is equipped with overheating protection device, please turn off the switch, disconnect the power supply, and cool down for 20-30 minutes before using.
10. Do not put the motor into water or other liquids, nor wash it under water or other liquids.
11. Do not use corrosive liquids (such as gasoline) to clean the product.
12. Do not put any parts of this product into the dishwasher for cleaning.
13. The machine should be stored away from

the reach of children. The product should not be used by people (including children) who are physically unfit, mentally handicapped or lack relevant experience and knowledge.

14. The machine is only suitable for personal or family use, not for commercial use.

Press the switch for **3** seconds to stop and **2** seconds for cyclic use.

The longest time to press the switch should not exceed **5** seconds.

In this way, it is ok to operate. Don't keep the switch on and off.

Product features

1. Motor overheating protection device, safe and reliable.
 2. Food-grade cup, healthy and hygienic, easy to clean.
 3. Detachable parts, easy to clean.
 4. Planetary gearbox variable speed structure, stable operation, small noise, strong tangling
 5. Distribute scrapers to take out food easily
- ### Chapter 4 Precautions for Safe Use

1. Be sure to disconnect the power supply before disassembling,

installing or adjusting any part of the product.

2. Before using, please check whether the power cord, plug and other parts are damaged. If any damage is found, please stop using the product and contact the customer service in time.

3. Before adding ingredients, please make sure that the knife rest of skein meat is installed in place and can operate freely.

4. It is strictly prohibited to empty the cup (**i.e. no food in the cup**) or over load use.

5. Do not add ingredients exceeding the ambient temperature of **50** degrees into the cup, and do not put them in the microwave oven for use and disinfection, so as to avoid breakage of the cup.

6. The machine cannot process hard food materials, such as coffee beans, dried soybeans and other similar food materials.

Food	Component	Note	Stirring Number	Stirring Number
Beef or mutton	ገፅፀ grams	Remove the bones and skin and cut into small pieces	፯ times	ፅ-፲ፀ seconds
Chicken	፶ፅፀ grams	Remove the bones and skin and cut into small pieces	፯ times	ፅ-፲ፀ seconds
an onion	፲፯ፀፀ grams	All four numbers	፭ times	፯-ፅ seconds
Chinese green onion	፲፯ፀፀ grams		፭ times	፯-ፅ seconds
pepper	፲፯ፀፀ grams	Cut each pepper into 4 cm pieces	፭ times	፯-ፅ seconds
carrot	፲ፅፀፀ grams	Cut each carrot into roughly 2cm pieces	፭ times	፯-ፅ seconds
tomato	፲ፅፀፀ grams	All four numbers	፶ times	፯-ፅ seconds
the vegetables	ገፀፀ grams	Cut the vegetables into 3 cm pieces.	፭ times	፯-ፅ seconds
Potato - taro	፲ፅፀፀ grams	Peeled and cooked	፭ times	፯-ፅ seconds
Fruit	፲ፅፀፀ grams	Cut about 2 cm	፶ times	፯-ፅ seconds
egg	፯፭ numbers		፲ time	፯-ፅ seconds
Peanut-Walnut	፲፯ፀፀ grams	Peel off	፯ times	ፅ-፲ፀ seconds
nuts	፲፯ፀፀ grams	Peel off	፯ times	ፅ-፲ፀ seconds
Bread crumbs	፲፶ slices	Use crusty bread	፶ times	፯-ፅ seconds
Sausage-ham	፲፯ፀፀ grams	Cut each sausage or ham into 3 or 4 pieces	፲ time	ፅ-፲ፀ seconds

table) so as not to affect the service life of the product.

8. After finishing the processing, disconnect the power supply. When the blade stops rotating, remove the main machine and open the transparent cover. Take out the meat cutter.

9. If the ingredients stick to the cup, turn off the switch and disconnect the power. Use a scraper or chopsticks to scrape off before processing.

10. Meat mincer, mincing machine can not be used to dry grind soybean, rice and other hard food materials.

11. If the product is shaking because of uneven distribution, stop the product, distribute the ingredients evenly in the cup, and then open the product.

12. If the required effect is not achieved within 15 seconds, please loosen the power switch

and process the product after an interval of 10-20 seconds. This method is conducive to prolonging the product life.



MODEL: DR-1005

FOOD CHOPPER

1. Please refer to the product picture in the package!
2. Do not omit to fill the lid sealing ring.
3. The plastic cup body does not contain lid sealing ring and shock absorbing coasters.

Method of use

1. Before using the product for the first time, wash the parts in contact with food thoroughly.
2. When the power is switched on, press the switch with your hand and the machine starts to work. Release your hand and the machine stops working.
3. Remove the tendon, bone and skin of meat before processing.
4. Put the meat knife into the cup, cut the ingredients into 1-2cm blocks and put them into the cup, put the vegetables and fruits into the ingredients should add

the right amount of water, the total amount should not exceed half of the total capacity of the cup. Otherwise, it will affect the crushing effect and service life of the product.


5. Close the lid and position accordingly. Place the motor seat on the cover and place it in place completely.
6. The product is provided with either fast or slow speed. First of all, according to the twisted food materials to choose the proper gear (**meat products use the fast gear**), then cooking, vegetables and fruits are suggested to use the slow gear.
7. Switch on the power and press the switch to start the operation Inching operation (**Tap for 3 seconds to stop for 2 seconds**) Repeat Inching operation At least 3 times before continuous work, one continuous work should not exceed the rated working time (**see attached**

Dear customers, thank you for using our electric cooking machine (**meat grinder, skewer**)

In order to facilitate your correct operation of the product, please read this manual carefully before using.

This product has passed the 3C certification of China Quality Certification Center, and it meets the requirements of relevant laws and regulations and standards. Please feel assured to use it.

May Our products bring warmth, convenience and health to your life.

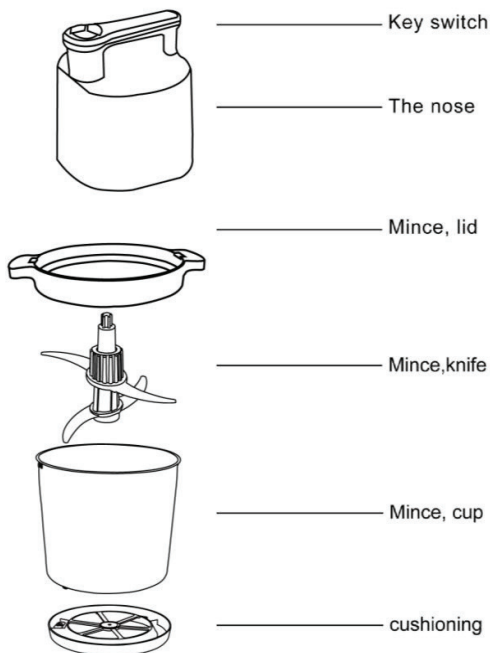

Introduction

- Danmor, as a trusted brand, strives to meet your needs by providing quality and reliable products. Our goal is to provide you with the best ways to deal with market fluctuations with high effort.
- The packaging and shipping of your orders is very important to us, and for that reason, we appreciate your purchase. If you have any questions or need help, our support team is always ready to help you.
- With Danmor, you won't have to worry about buying appliances again. With our quality and reliable products, you can easily enjoy the moments of housekeeping.



MODEL: DR-1005 

FOOD CHOPPER

_ Introduction	2
_ Method of use	4
_ Product features	7
_ Cleaning and Maintenance	9
_ faultanalysis.....	10
_ Garrantyand after- sales service.....	11



 MODEL: DR-1005

FOOD CHOPPER

