

- ۲..... مقدمه _
- ۳..... دستورالعمل های ایمنی _
- ۴..... راهنمای اجزا محصول _
- ۵..... راهنمای استفاده از خردکن _
- ۷..... راهنمای نگهداری و تمیز کردن دستگاه _
- ۸..... گارانتی و خدمات پس از فروش _



- دانمور، به عنوان یک برند قابل اعتماد تلاش می‌کند تا نیازهای شما را با ارائه محصولات با کیفیت و قابل اعتماد برطرف کند. هدف ما این است که با تلاش بالا، بهترین روش‌های رفع نوسانات بازار را برای شما فراهم کنیم
- بسته‌بندی و ارسال سفارشات شما برای ما بسیار حائز اهمیت است و به همین دلیل، خرید شما را قدردانی می‌کنیم. در صورت داشتن هرگونه سؤال یا نیاز به راهنمایی، تیم پشتیبانی ما همواره آماده است تا به شما کمک کند
- با دانمور، دیگر نگران خرید لوازم خانگی خود نباشید. با محصولات با کیفیت و قابل اعتماد ما، به راحتی می‌توانید از لحظات خانه داری لذت ببرید



MODEL: DR-1001

۲

FOOD CHOOPER

دستورالعمل‌های ایمنی

لطفاً قبل از استفاده از دستگاه هشدارهای مهم ایمنی راهنمای نصب قطعات و راهنمای استفاده از دستگاه را مطالعه کنید

۱. قبل از استفاده دستگاه برای اولین بار تمام بخش‌هایی که با غذا در تماس هستند را کاملاً بشوئید

۲. این دستگاه فقط برای استفاده خانگی و مکان‌های مشابه آن طراحی شده است

۳. این وسیله برای استفاده توسط افراد از جمله (کودکان با ناتوانی فیزیکی، حسی و عقلی یا افراد بی تجربه و ناآگاه) طراحی نشده است، مگر اینکه با حضور سرپرست مسئول در قبال ایمنی آن‌ها و نظارت یا دستورالعمل استفاده از وسیله باشد.

۴. باید اطمینان حاصل شود کودکان با این وسیله بازی نمی‌کنند

۵. حتماً قبل از تعویض قطعات یا قسمت‌های متحرک، دستگاه را خاموش و دوشاخه را از پریز درآورید

۶. بررسی کنید که ولتاژ دستگاه با ولتاژ برق مصرفی مطابقت داشته باشد.

۷. اجازه ندهید که دستگاه به صورت خالی و بدون مواد کار کند.

۸. در صورت بروز هرگونه مشکل و خرابی در هر یک از اجزای دستگاه اعم از کابل تغذیه و دوشاخه هرگز از دستگاه استفاده نکرده و فوراً با یکی از نزدیک‌ترین مراکز خدمات پس از فروش تماس گرفته یا دستگاه را به مرکز ارسال نمایید.

۹. اکیداً توصیه می‌شود به هیچ عنوان هیچ‌کدام از قطعات دستگاه را برای ضدفونی با بخار، آب جوش یا ضدفونی به صورت خشک در دمای بالا قرار ندهید.

۱۰. تیغه‌ها بسیار تیز هستند، لطفاً هنگام تمیز کردن آن را زیر شیر آب بگیرید و از تماس مستقیم با دست خودداری کنید

۱۱. دستگاه، سیم و دوشاخه‌ی آن را داخل آب یا مایعات دیگر قرار ندهید.

۱۲. سیم برق دستگاه میبایست دور از منبع

گرمایشی و لبه‌های تیز قرار گیرد.
 ۱۳. تا زمانی که تمامی قطعات را نصب ننموده‌اید
 دوشاخه را به برق وصل نکنید.
 ۱۴. از ریختن مواد بسیار داغ به داخل کاسه
 خودداری کنید



راهنمای اجزا محصول

کلید سرعت	۱
بدنه اصلی	۲
درب	۳
واشر	۴
تیغه	۵
کاسه	۶
ضربه‌گیر	۷

MODEL: DR-1001 ۴

FOOD CHOOPER

ناگهانی شود.

۹. هنگام دست زدن به تیغه‌های تیز برش در حین خالی کردن ظرف و تمیز کردن آن باید دقت و احتیاط شود.



راهنمای استفاده از خردکن

۱. لطفاً قبل از استفاده برای اولین بار تمام قسمت‌هایی که در تماس با مواد غذایی هستند را کاملاً تمیز کنید.

۲. پارچ خردکن را روی سطحی صاف قرار دهید.

۳. درب را روی کاسه خردکن قرار دهید.

۴. دستگاه خردکن را به طوری که شیار دستگاه با شیار درب در یک راستا باشد بر روی درب قرار دهید.

۵. دوشاخه را به پریز برق وصل کنید.

۶. جهت به دست آمدن مخلوطی ریز و یکنواخت با فشار متناوب با دستگاه کار کنید، در صورتی که مواد غذایی به دیواره‌ی پارچ چسبیده باشند، به کمک کاردک آن‌ها را جدا کرده و درون پارچ قرار دهید و مجدداً دستگاه را روشن کنید.

۷. هرگز مایعات و مواد غذایی بسیار داغ را درون پارچ نریزید.

۸. باید دقت شود اگر مایع داغ به داخل کاسه ریخته شود، میتواند باعث خارج شدن بخارهای

راهنمای استفاده از خردکن

مقدار	بازه زمانی کارکرد دستگاه	تعداد بازه‌های زمانی کارکرد دستگاه	دستورالعمل مورد نیاز	نوع غذا
۲۰۰ گرم	۳ تا ۵ ثانیه	۳ بار	بدون استخوان و پوست	گوشت
۳۰۰ گرم	۳ تا ۵ ثانیه	۴ بار	-----	پیاز و سبزیجات
۳۰۰ گرم	۳ تا ۵ ثانیه	۴ بار	تکه های ۲ سانتی	لفل و هویج
۳۵۰ گرم	۳ تا ۵ ثانیه	۲ بار	تکه های کوچک	گوجه و میوه
۲۵۰ گرم	۳ تا ۵ ثانیه	۱ بار	-----	تخم مرغ
۲۰۰ گرم	۳ تا ۵ ثانیه	۲ بار	تکه های کوچک	سیب زمینی

راهنمای نگهداری و تمیز کردن دستگاه

۱. حتماً بعد از اتمام کار دوشاخه را از برق بیرون آورید.

۲. تمامی اجزای دستگاه که با مواد غذایی در تماس هستند را با آب و مایع ظرفشویی بشویید
۳. هنگام شستشو مواظب تیغه‌ها باشید چون بسیار تیز هستند

۴. در صورت رنگ و لک گرفتن اجزای دستگاه آن‌ها را با پارچه آغشته به روغن پاک کنید و سپس بشویید


۵. بدنه اصلی دستگاه نباید با آب تماس داشته باشد و قابل شستشو نیست، باید آن را با دستمال مرطوب تمیز کرده و سپس خشک کنید.



تیغه




کارد پلاستیکی

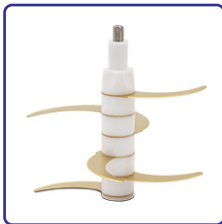

تیغه تیتانیوم



ضربه‌گیر

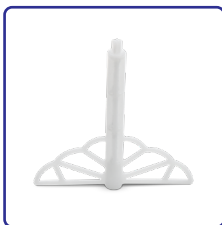

همزن پلاستیکی

گارانتی و خدمات پس از فروش


- شرکت دانمور، یک برند قابل اعتماد است که تلاش میکند تا با ارائه محصولات با کیفیت و قابل اعتماد، نیازهای شما را برطرف کند. هدف ما این است که با تلاش بالا، بهترین روش‌های رفع نوسانات بازار را برای شما فراهم کنیم
- ما به بسته‌بندی و ارسال سفارشات شما بسیار اهمیت می‌دهیم و خرید شما را قدردانی می‌کنیم. در صورت داشتن هرگونه سوال یا نیاز به راهنمایی، تیم پشتیبانی ما همواره آماده است تا به شما کمک کند
- با دانمور، دیگر نگران خرید لوازم خانگی خود نباشید. با محصولات با کیفیت و قابل اعتماد ما به راحتی می‌توانید از لحظات خانه‌داری لذت ببرید
- به علاوه، دانمور یک گارانتی ۲۴ ماهه برای این دستگاه ارائه می‌دهد. در صورت بروز هرگونه مشکل، شما می‌توانید با شرکت تولیدکننده تماس بگیرید و از خدمات پس از فروش آن

استفاده کنید. همچنین در صورت نیاز به تعمیرات قطعات جایگزین و خدمات، می‌توانید با شماره تماس ۰۸۷۳۴۲۷۸۵۳۲/۰۹۱۸۷۹۵۹۰۸۵/۰۲۱۹۱۶۹۱۴۱۳ تماس بگیرید و از خدمات آن استفاده کنید.

توان	۴۰۰ وات
فرکانس	۵۰ هرتز
ولتاژ	۲۲۰-۲۴۰ ولت



Made in I.R.IRAN

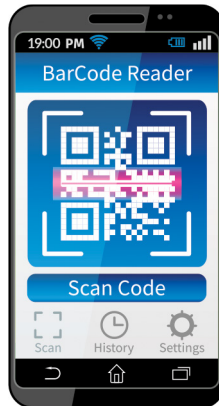

MODEL: DR-1001 ۸

FOOD CHOOPER



FOOD MODEL UR-1002

FOOD CHOOPER




MODEL: DR-1001 9

FOOD CHOOPER

Garranty and after - sales service

- Danmor Company is a reliable brand that strives to meet your needs by providing quality and reliable products. Our goal is to provide you with the best ways to deal with market fluctuations with high effort.
- We take the packaging and shipping of your orders very seriously and appreciate your purchase. If you have any questions or need help, our support team is always ready to help you. With Danmor, you won't have to worry about buying appliances again. With our quality and reliable products, you can easily enjoy the moments of housekeeping.
- Additionally, Danmor offers a 24-month Garranty for this device. In case of any problem, you can contact the manufacturer Use its after-sales service.

Also, if you need repairs, replacement parts and services, you can call at **02191691413 / 0918 795 9085 / 0873 427 8532** and use its services.

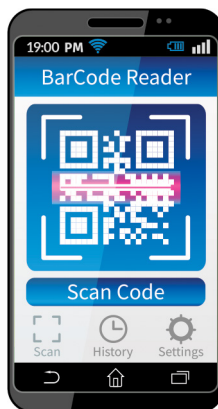

power	400W
frequency	50HZ
voltage	220-240V



Made in I.R.IRAN

8 MODEL: DR-1001


FOOD CHOOPER

Device maintenance and cleaning guide

1. Be sure to remove the plug from the power supply after finishing work.
2. Wash all the parts of the device that are in contact with food with water and dishwashing liquid.
3. Be careful with the blades when washing because they are very sharp.
4. If the parts of the device get stained, wipe them with a cloth dipped in oil and then wash them.
5. The main body of the device should not be in contact with water and cannot be washed. You should clean it with a wet towel and then dry it.



Blade

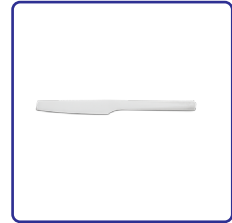


Plastic card



Titanium blade



Anti shock

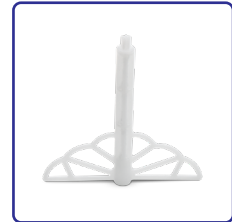

Plastic stirrer

Guide to using the shredder

Type of Food	Recipe required	The number of operating time intervals of the device	Operating time of the device	Quantity
Meat	Without bones and skin	3 times	3 to 5 seconds	200gr
Onions and vegetables	----	4 times	3 to 5 seconds	300gr
Pepper and carrot	2 cm pieces	4 times	3 to 5 seconds	300gr
Tomatoes and fruits	Small pieces	2 times	3 to 5 seconds	350gr
Egg	----	1 time	3 to 5 seconds	250gr
Eotato	Small pieces	2 times	3 to 5 seconds	200gr

Guide to using the shredder

1. Please thoroughly clean all food contact parts before using for the first time.
2. Place the crushing pitcher on a flat surface.
3. Place the lid on the chopper bowl.
4. Place the shredder on the door so that the groove of the device is aligned with the groove of the door.
5. Connect the plug to the electrical outlet.
6. In order to obtain a fine and uniform mixture, work with the device with alternating pressure. If the food is stuck to the wall of the pitcher, separate them with the help of a spatula and put them in the pitcher and turn on the device again.
7. Never pour very hot liquids and food into the pitcher.



water or other liquids.

12. The power cord of the device should be placed away from the heating source and sharp edges.

13. Do not plug in until you have installed all the parts.

14. Avoid pouring very hot ingredients into the bowl.

1	Speed key
2	main body
3	Door
4	Washer
5	blade
6	Bowl
7	Anti shock



Important safety measures

Before using the device, please read the important safety warnings, the parts installation guide and the device use guide.

1. Before using the device for the first time, thoroughly wash all the parts that are in contact with food.
2. This device is only designed for home use and similar places.
3. This device is not designed to be used by people (**including**) children with physical, sensory and mental disabilities or inexperienced and uninformed people unless there is a supervisor responsible for their safety and supervision or instructions for using the device.
4. It should be ensured that children do not play with this device.
5. Be sure to turn off the device and unplug it from the outlet before changing parts or mov-

ing parts take out.

6. Check that the voltage of the device corresponds to the voltage of the electricity used.
7. Do not allow the device to work empty and without materials.
8. In case of any problem or failure in any of the components of the device, including the power cable and plug, never use the device and immediately contact one of the nearest aftersales service centers or send the device to the center.
9. It is strongly recommended that you do not place any of the parts of the device in high temperature for disinfection with steam, boiling water or dry disinfection.
10. The blades are very sharp, please run it under tap water when cleaning and avoid direct contact with your hands.
11. Do not put the device, its wire and plug into

Introduction

- Danmor, as a trusted brand, strives to meet your needs by providing quality and reliable products. Our goal is to provide you with the best ways to deal with market fluctuations with high effort.
- The packaging and shipping of your orders is very important to us, and for that reason, we appreciate your purchase. If you have any questions or need help, our support team is always ready to help you.
- With Danmor, you won't have to worry about buying appliances again. With our quality and reliable products, you can easily enjoy the moments of housekeeping.



2 MODEL: DR-1001

FOOD CHOOPER

_ Introduction	2
_ Important safety measures	3
_ Guide to using the shredder.....	5
_ Device maintenance and cleaning guide	7
_ Garranty and after-sales servic	8



MODEL: DR-1001 1